


FRACTAL F1 QUICKSTART GUIDE

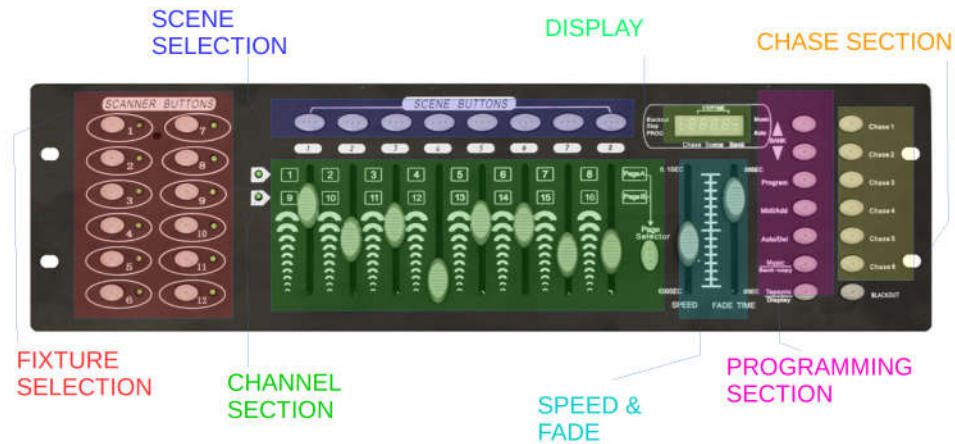

1


ACTIVATING PROGRAMMING MODE



1. Hold down the **PROGRAM** button for 2s.
The **PROG** light is active

2

FIXTURE SELECTION

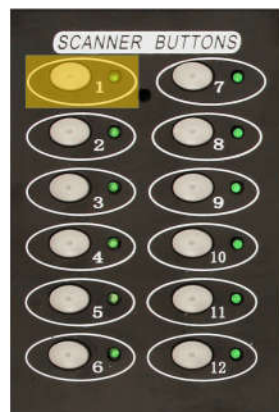


2. Select desired fixture, for example **[1]** LED PAR 9*10 W with dmx address set to 001



3

QUICK TIP

The F1 controller has got fixture selection buttons for 12 fixtures, each maximum up to 16 channels.

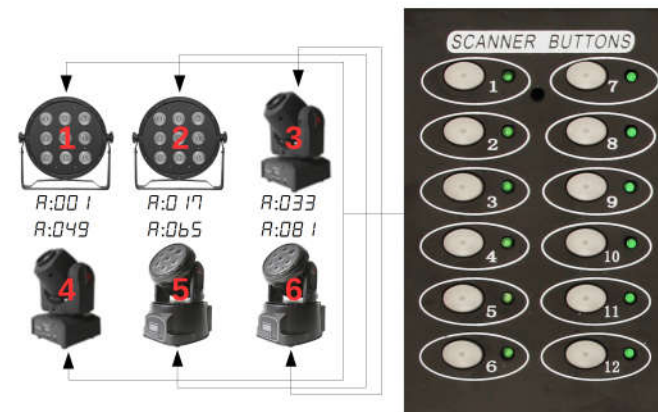


4

SETTING DMX LEVELS




3. Set dmx channels levels according to your desire, for example channels 1+2 at 100%

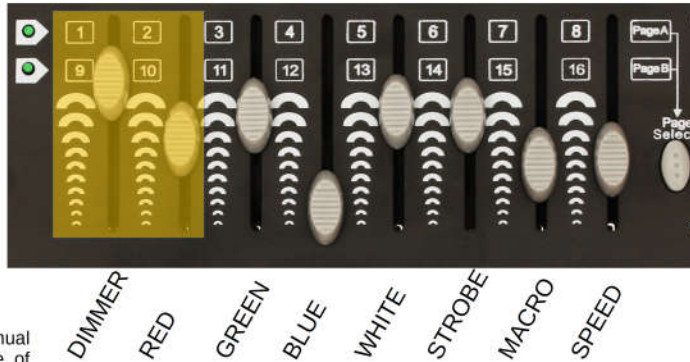

Please refer to manual for the dmx scheme of your fixture!

5


SAVE SCENE

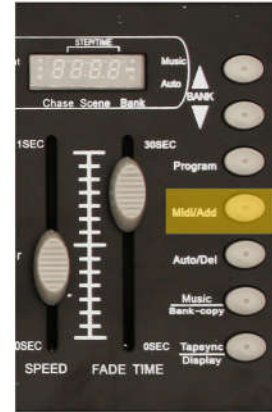

4a. Press button **MIDI/ADD** to enter scene recording mode

6

SAVE SCENE continued

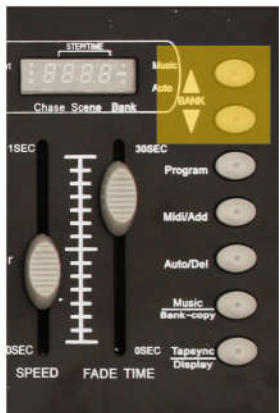

4b. Select **BANK** to which the scene will be recorded

7

SAVE SCENE continued


5. Select destination scene number (1-8) **SCENE [1]** on which current dmx levels should be saved



8

Continue until desired effects are achieved


6. Repeat steps 3>4>5 for other scenes

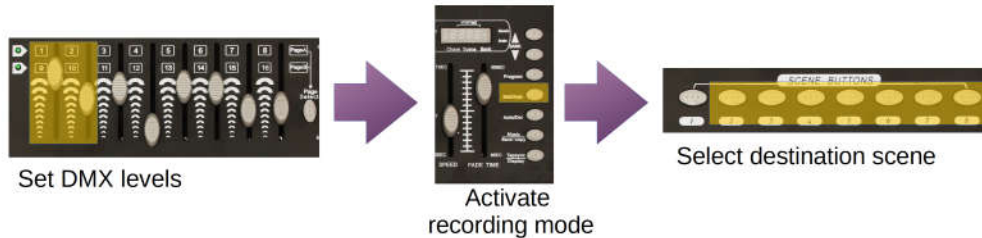

9

LEAVING PROGRAMMING MODE

7. Hold down the **PROGRAM** button to leave programming mode

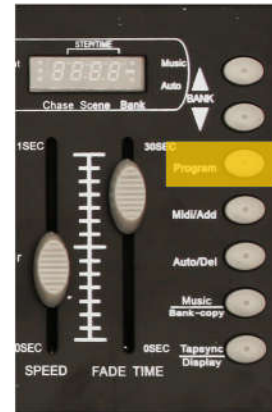


10

PLAYBACK OF PROGRAMMED SCENES

8. Select recorded in previous steps **BANK** and desired playback mode **AUTO** or **MUSIC**


9. Faders **SPEED** and **FADE TIME** adjust the program speed and fade

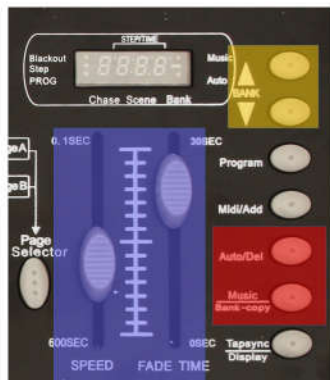

11

QUICK TIP

You can synchronise playback speed by tapping the **TAPSYNC** button to the beat

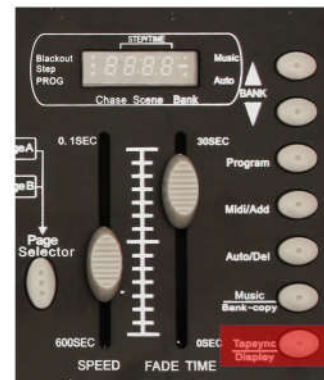

12

CHASE CREATION




10. Enter programming mode, next select desired **CHASE**

11. Select **BANK** and **SCENE** you want to add into chase. Push **MIDI/ADD** to copy selected scene into current **CHASE**.

13

CHASE CREATION continued

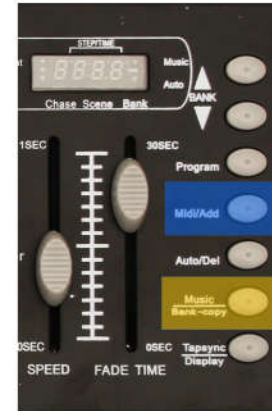


11b. To copy entire **BANK** into **CHASE**, select desired **BANK**, press **MUSIC/BANK-COPY** and **MIDI/ADD**

12. Repeat step(s) (11) until desired scenes are copied into chase. Leave programming mode

14

CHASE PLAYBACK

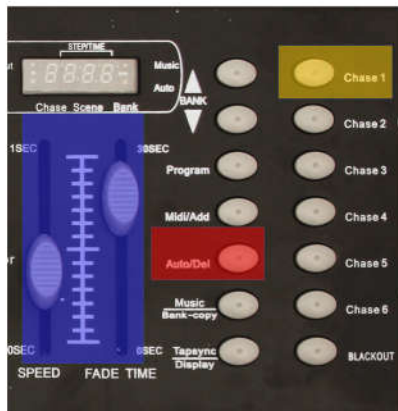

13. Select mode **AUTO**

14. Select programmed **CHASE**

15. Faders **SPEED** and **FADE TIME** adjust the playback speed and fade time

15